

FIG. 1

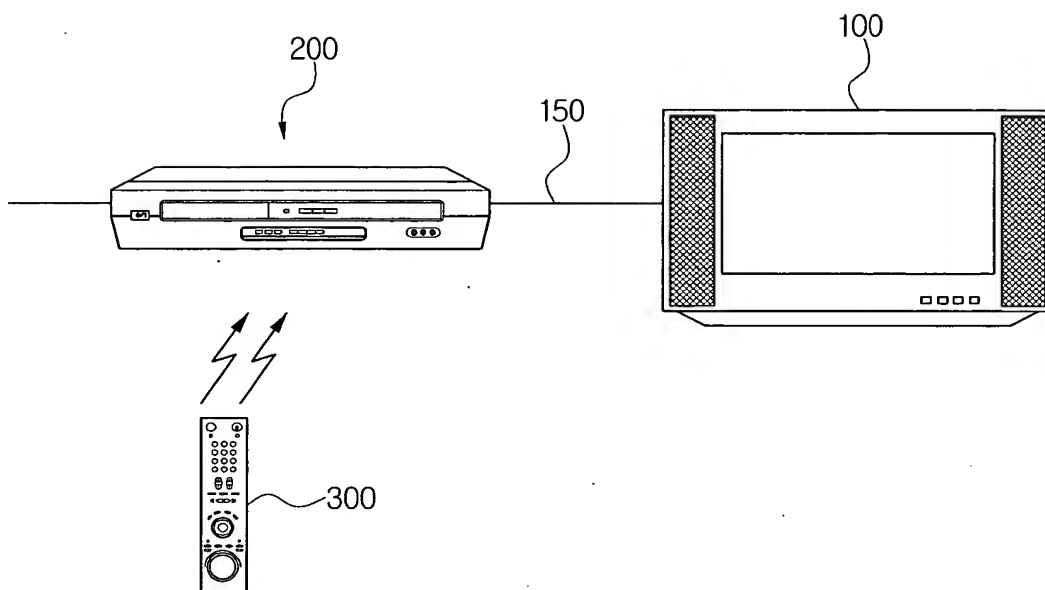 


FIG. 2

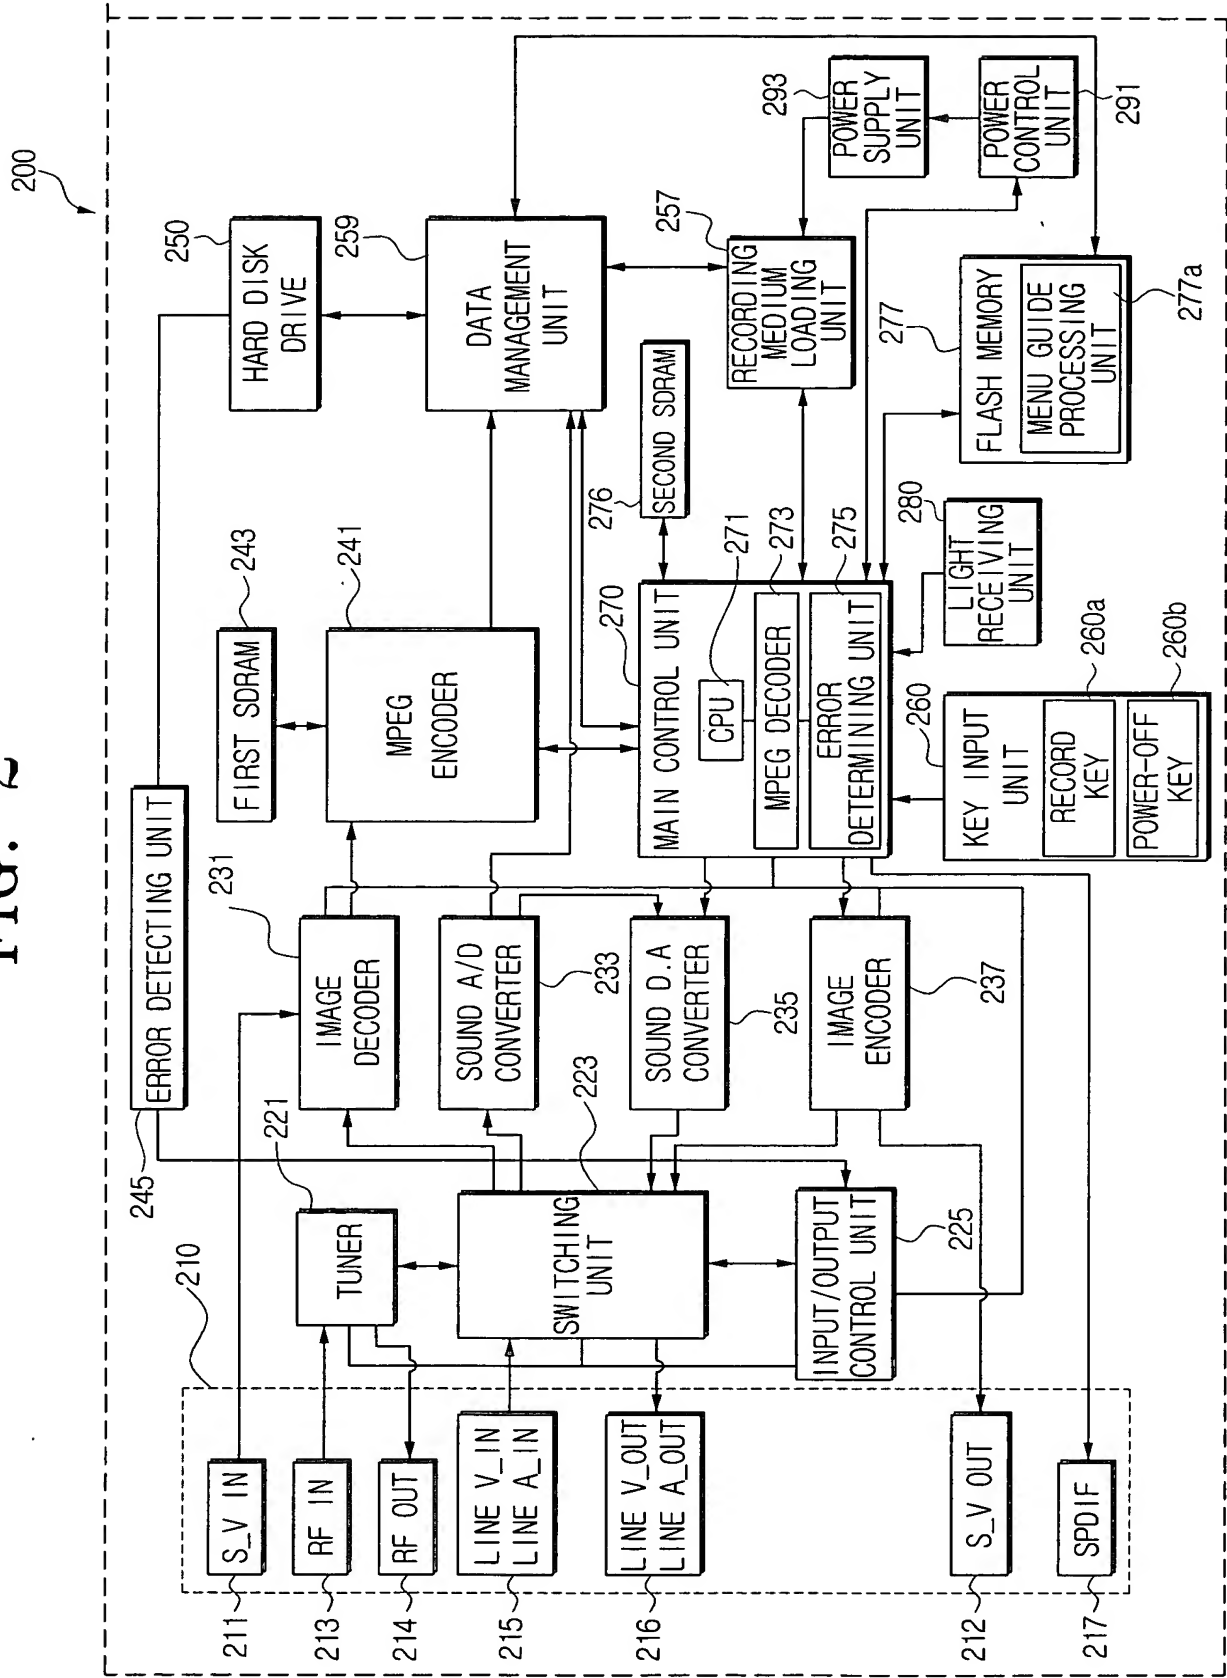 


FIG. 3

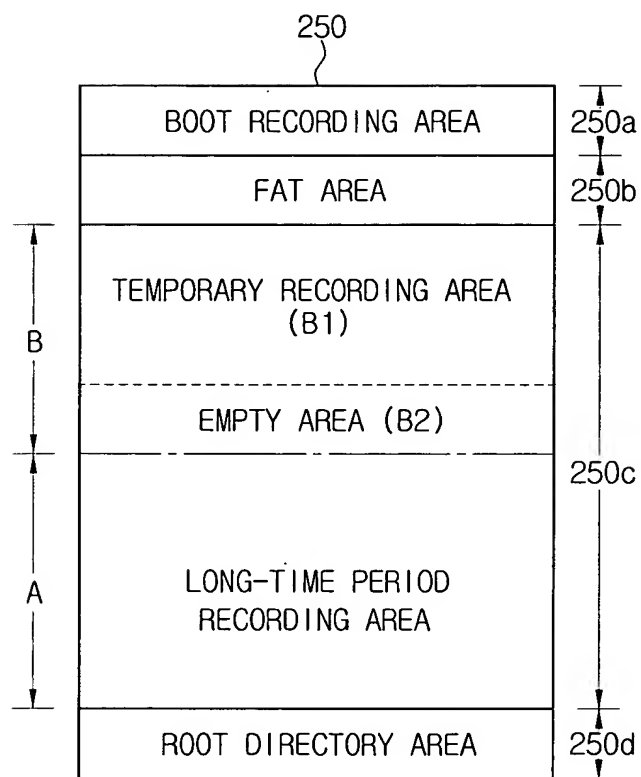 


FIG. 4

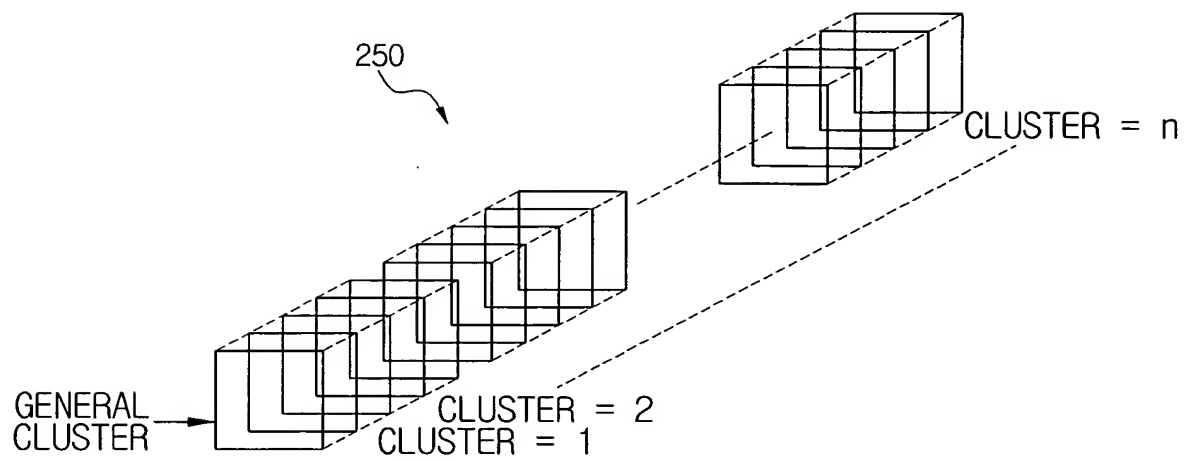 


FIG. 5

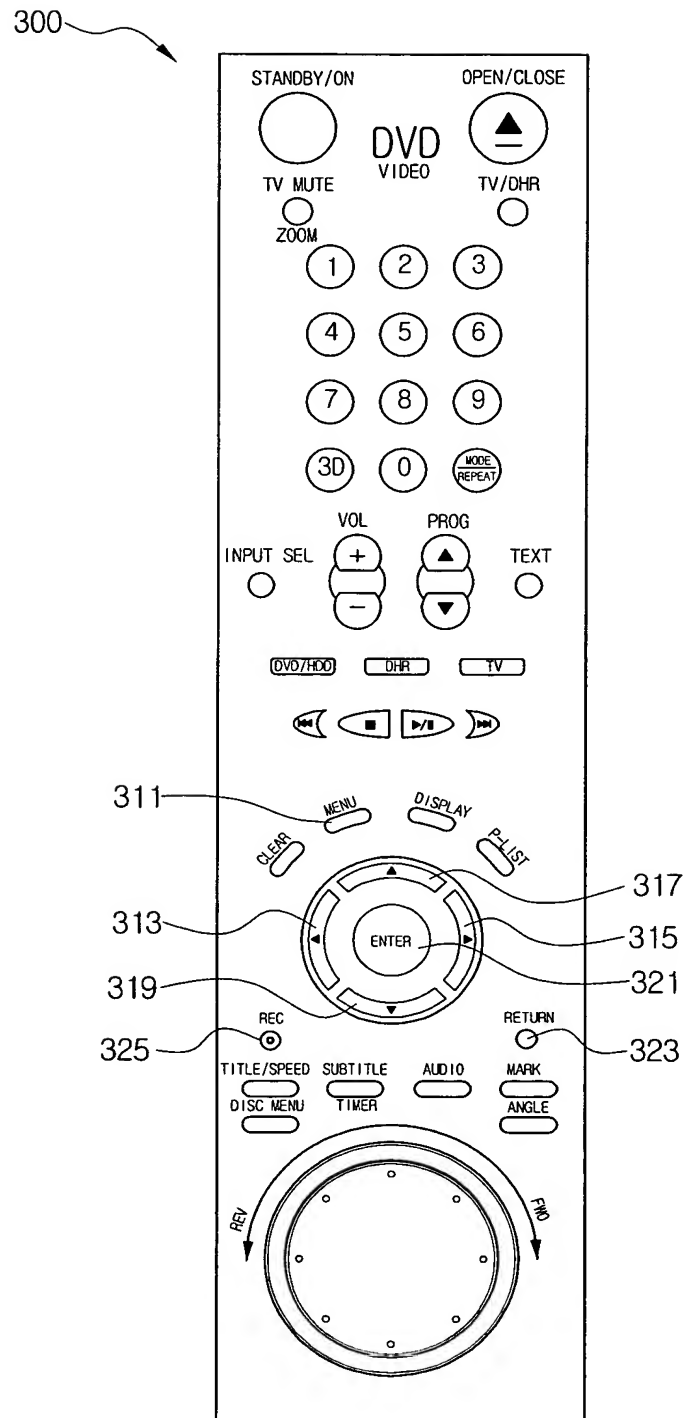 


FIG. 6

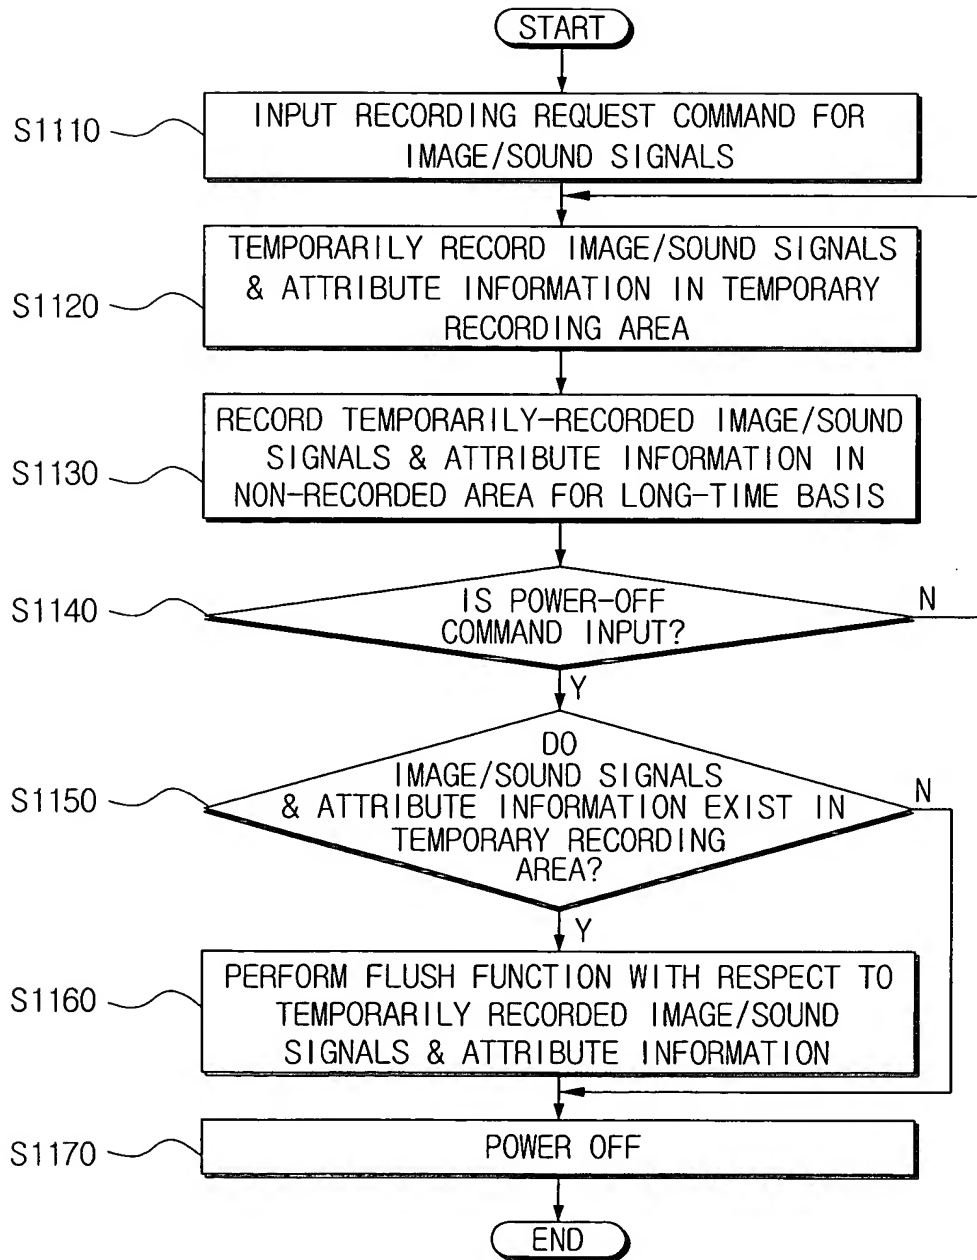 


FIG. 7

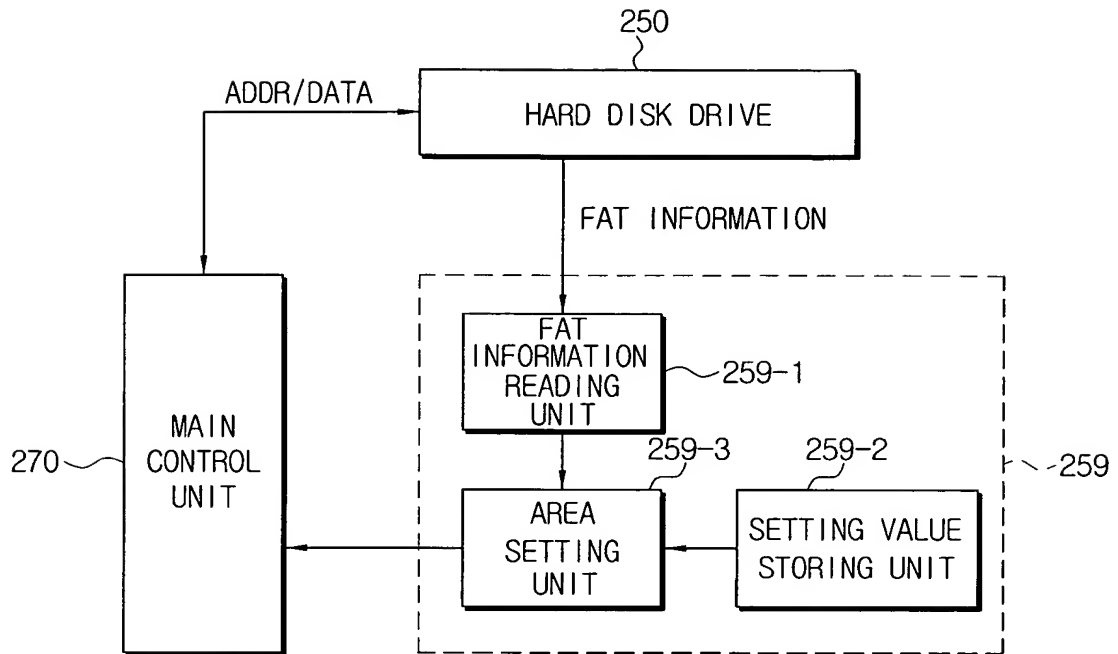 


FIG. 8

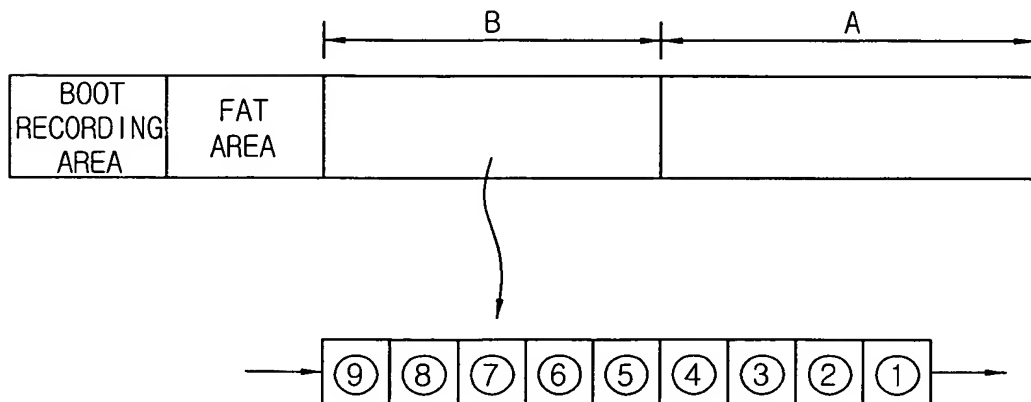 


FIG. 9A

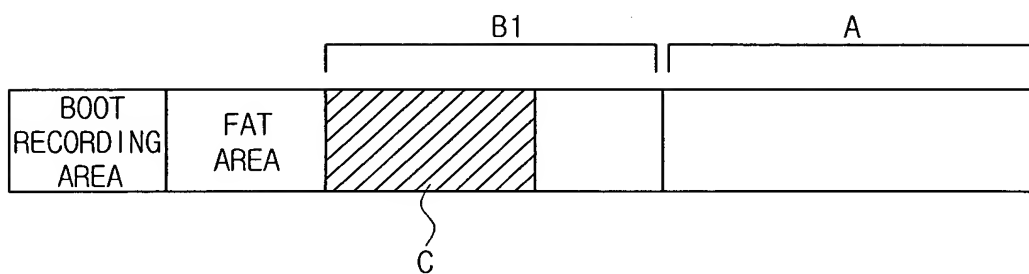 


FIG. 9B

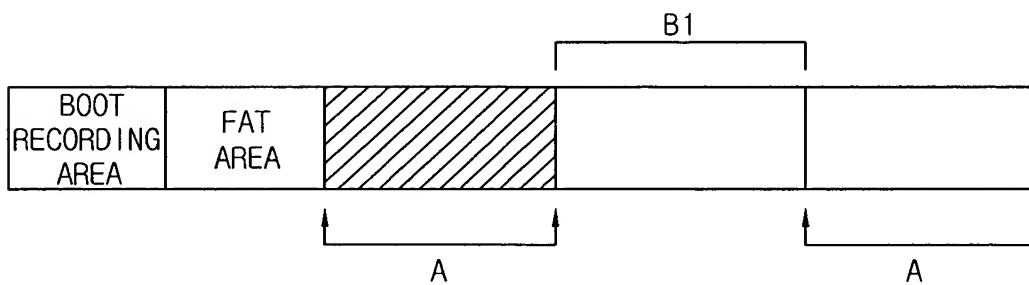 


FIG. 10

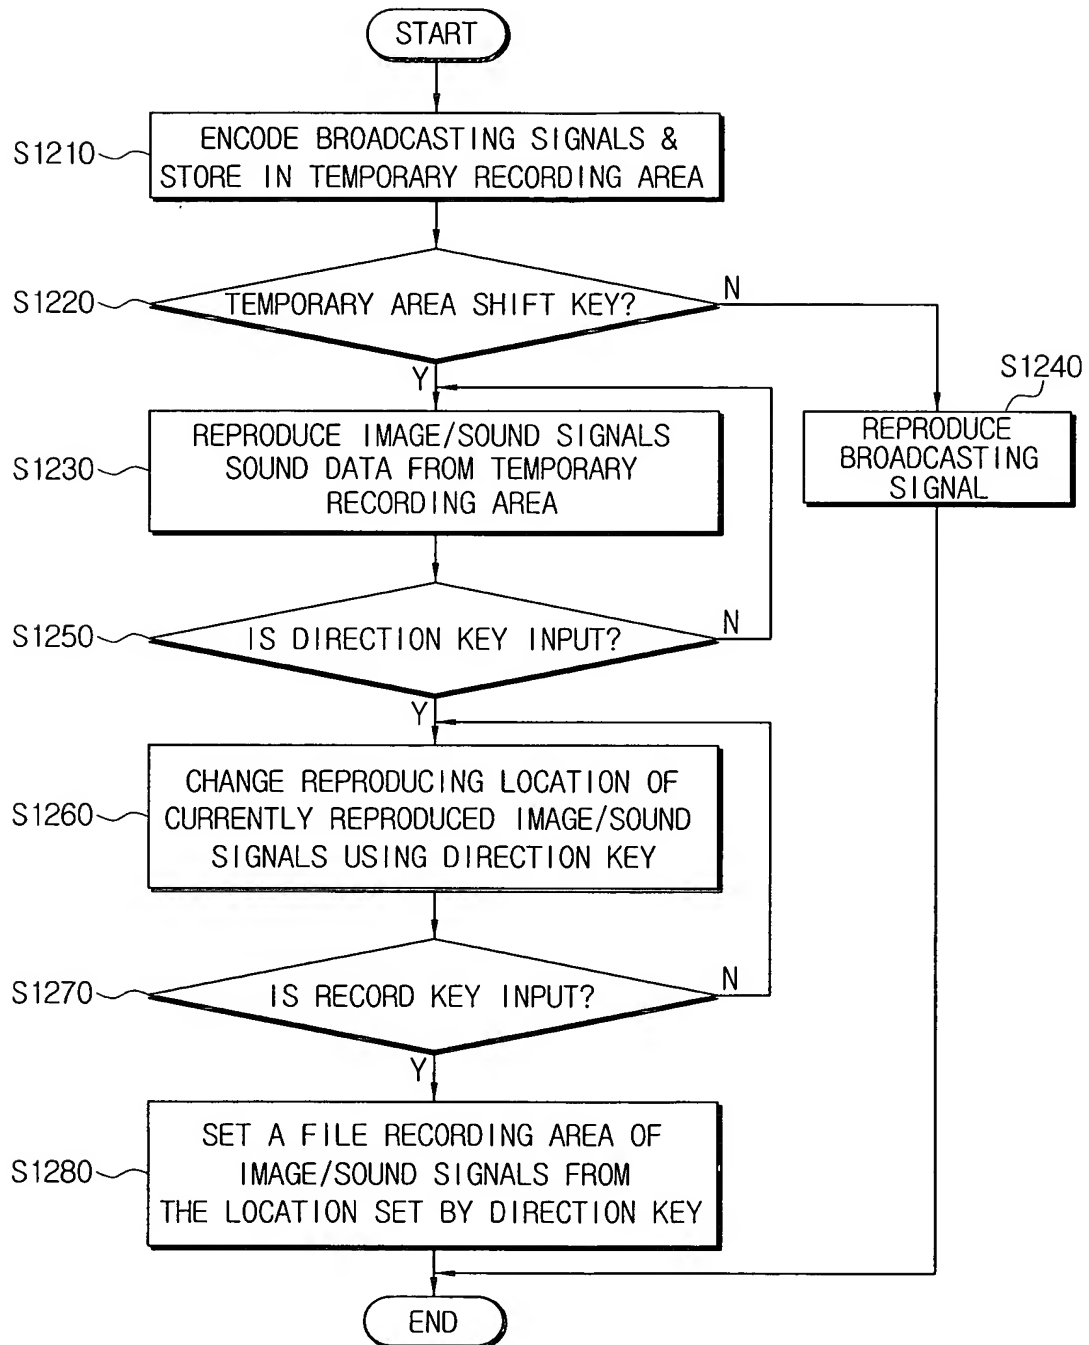 


FIG. 11

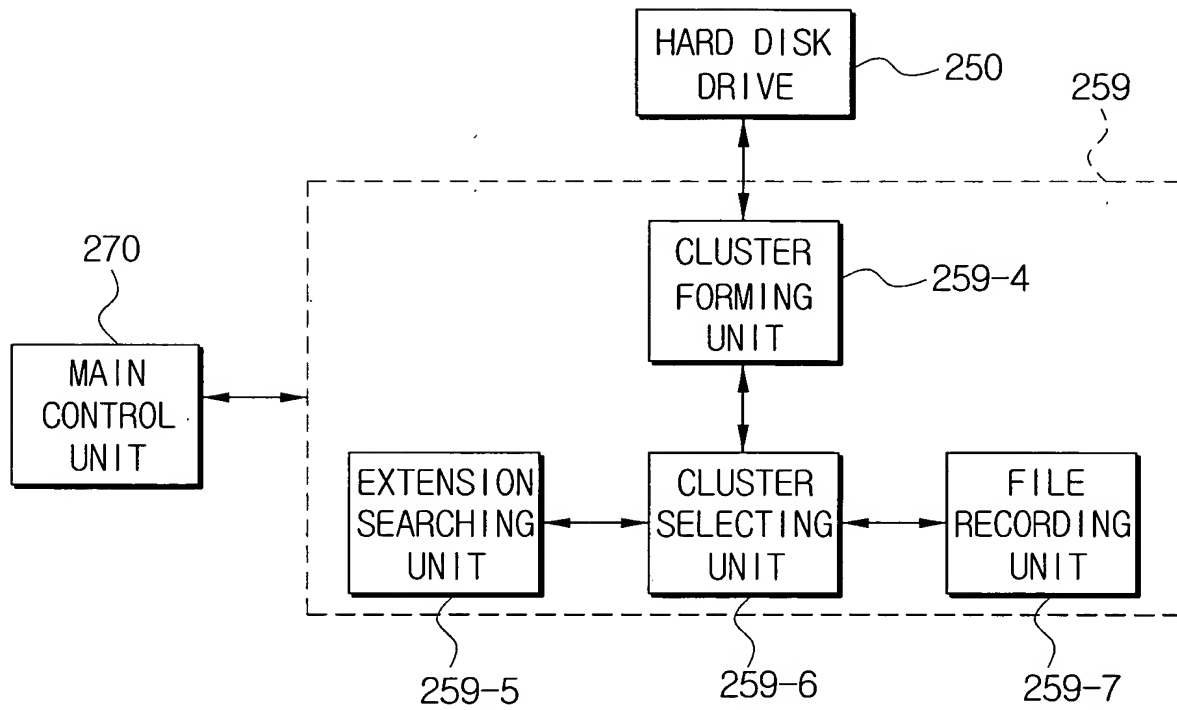 


FIG. 12A

410

HDD DIVISION

	MPEG	MP3	PICTURE
1	40HR	250	10K
2	30HR	2500	10K

1

2

410-1

FIG. 12B

411

HDD DIVISION

DO YOU REALLY WANT TO FORMAT?

YES

NO

411-1

FIG. 12C

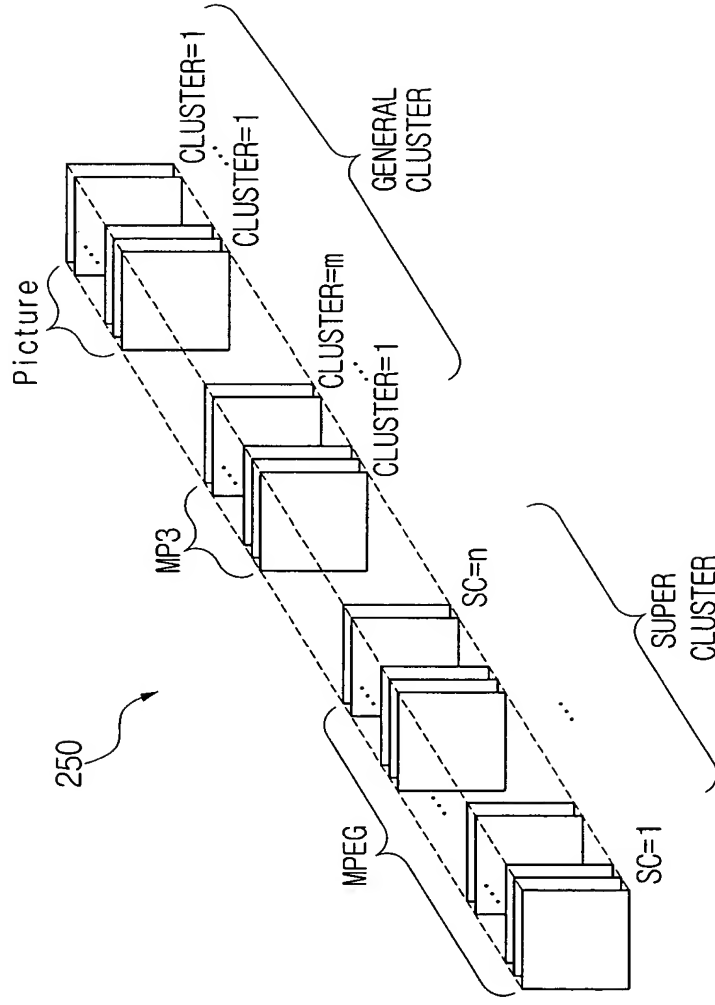 


FIG. 13A

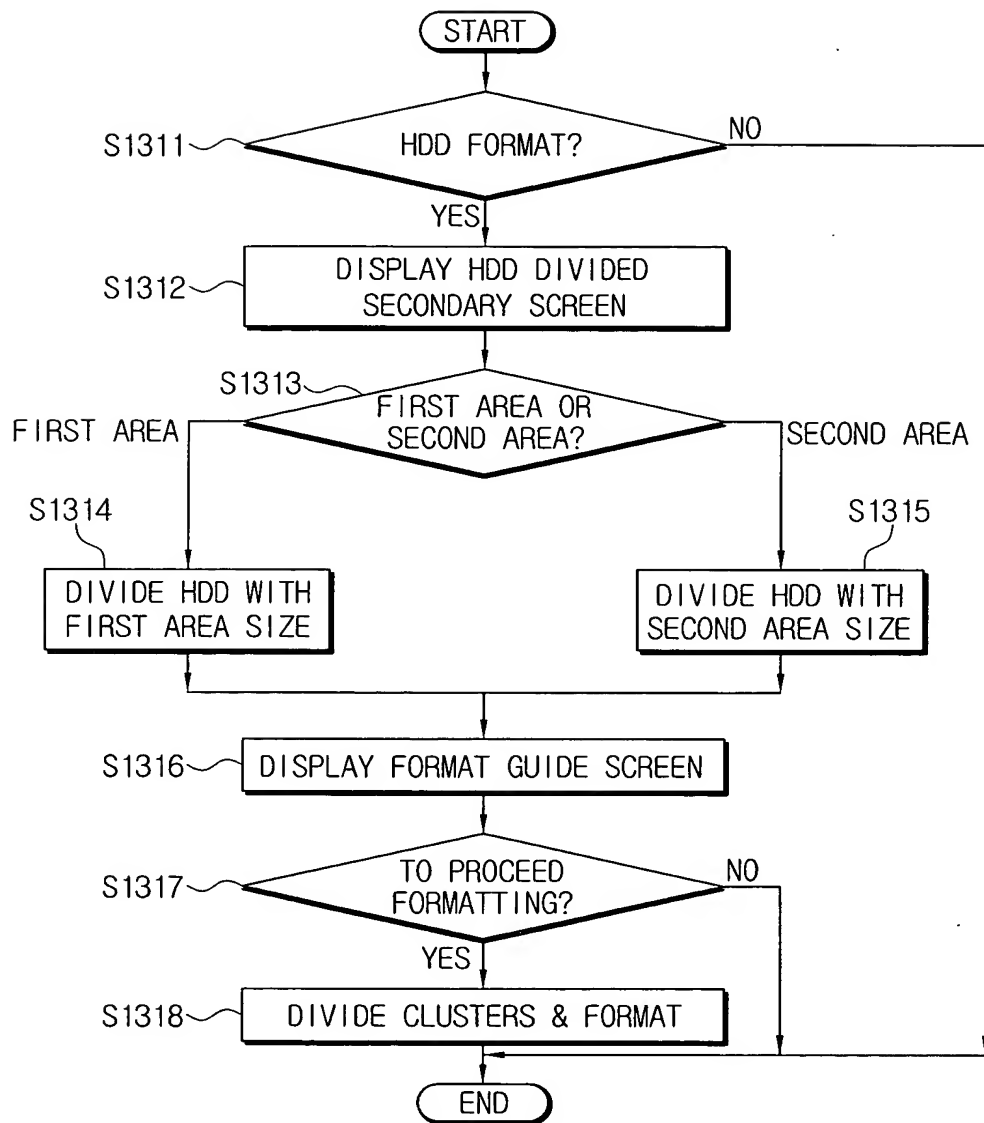 


FIG. 13B

 
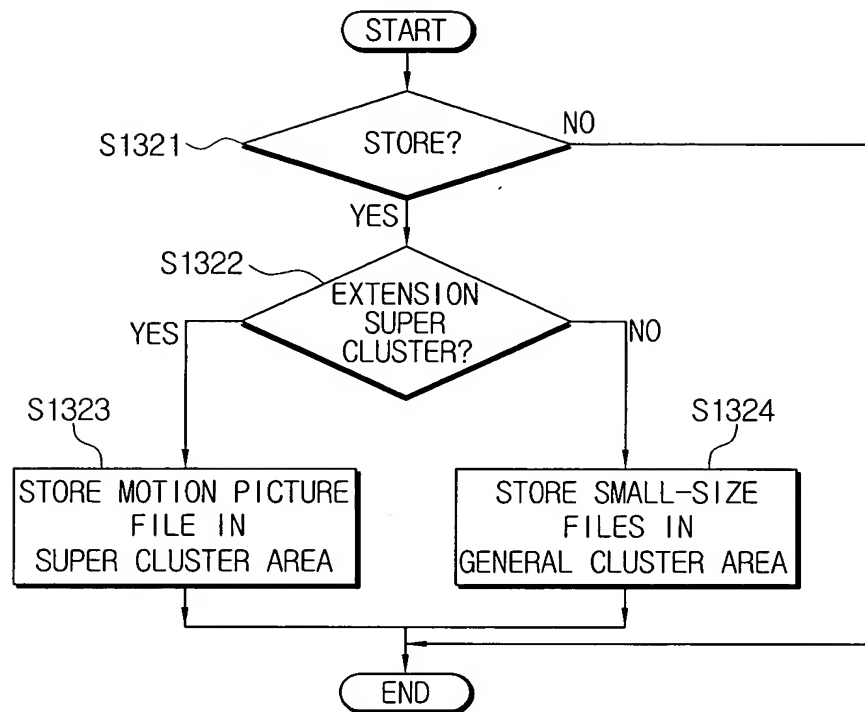 


FIG. 14



The diagram shows a menu screen layout. A large arrow labeled 420 points to the entire menu area. Three smaller arrows point to specific parts: 420-1 points to the 'EDIT' option, 420-2 points to the 'COMBINE' option, and 420-3 points to the 'PARTIAL DELETE' option.

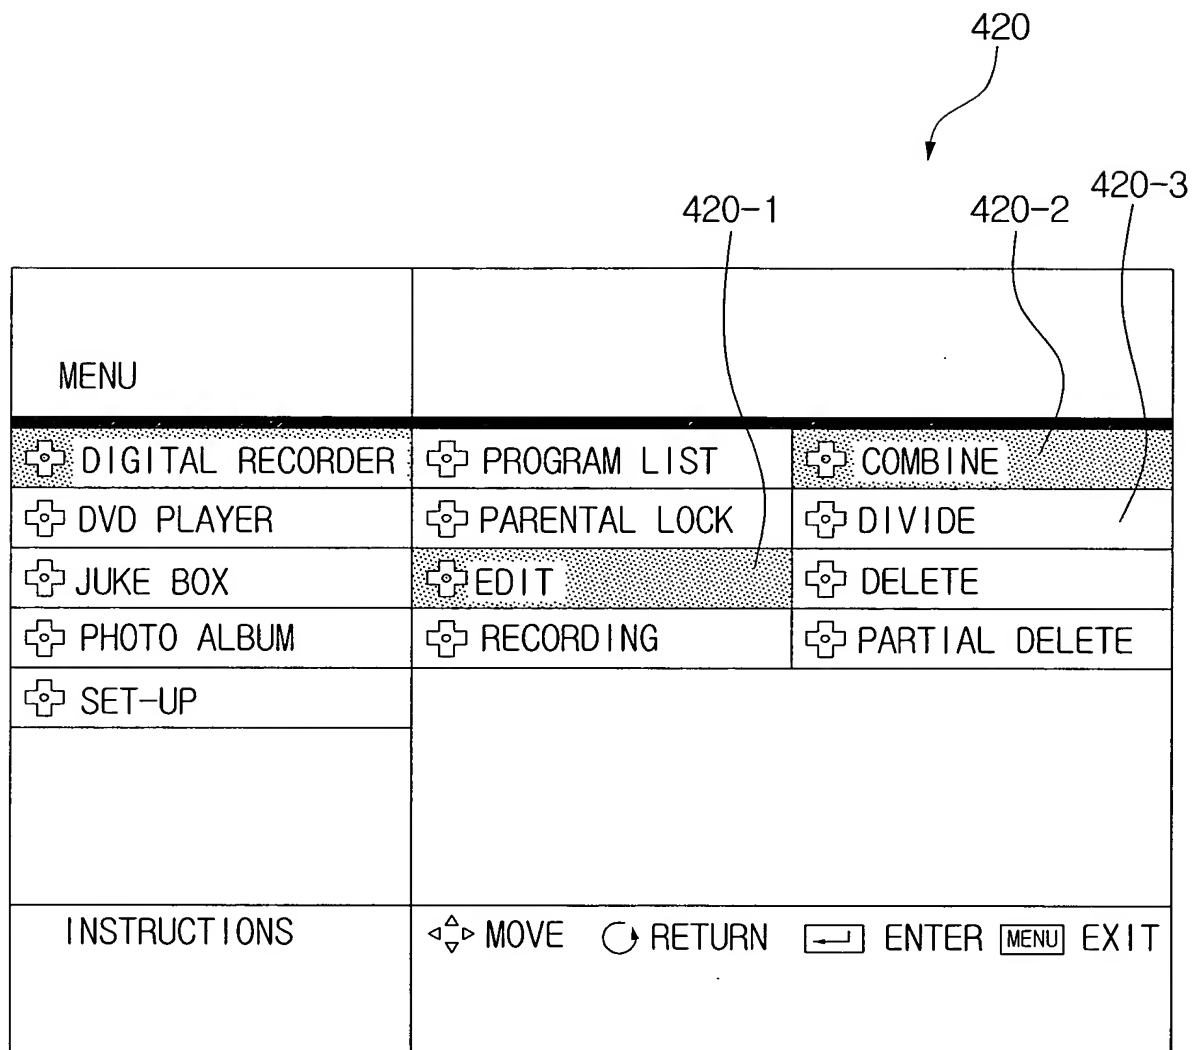

 

MENU		
+ DIGITAL RECORDER	+ PROGRAM LIST	+ COMBINE
+ DVD PLAYER	+ PARENTAL LOCK	+ DIVIDE
+ JUKE BOX	+ EDIT	+ DELETE
+ PHOTO ALBUM	+ RECORDING	+ PARTIAL DELETE
+ SET-UP		
INSTRUCTIONS	 MOVE  RETURN  ENTER  EXIT	

FIG. 15

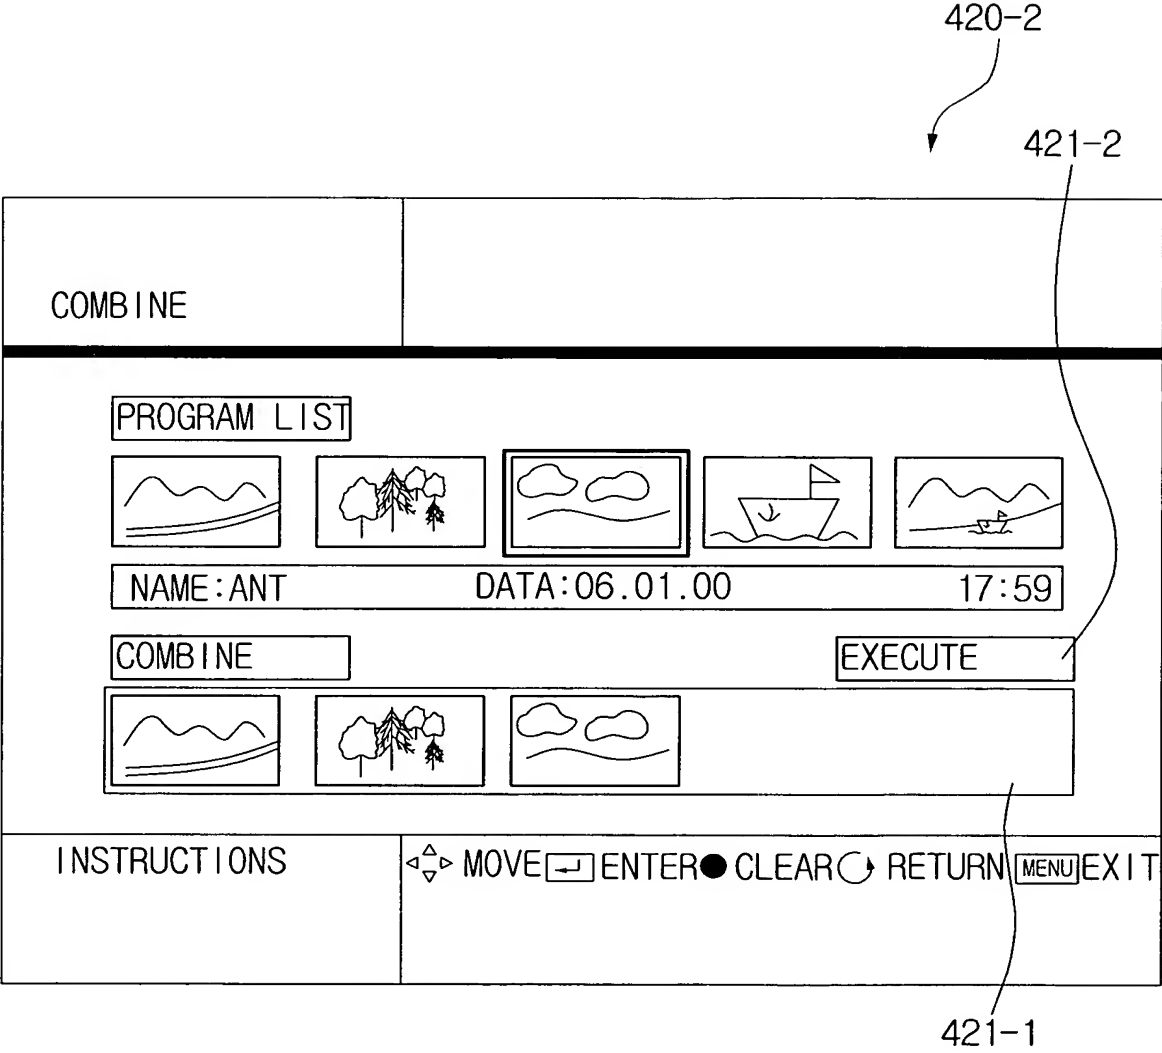 


FIG. 16

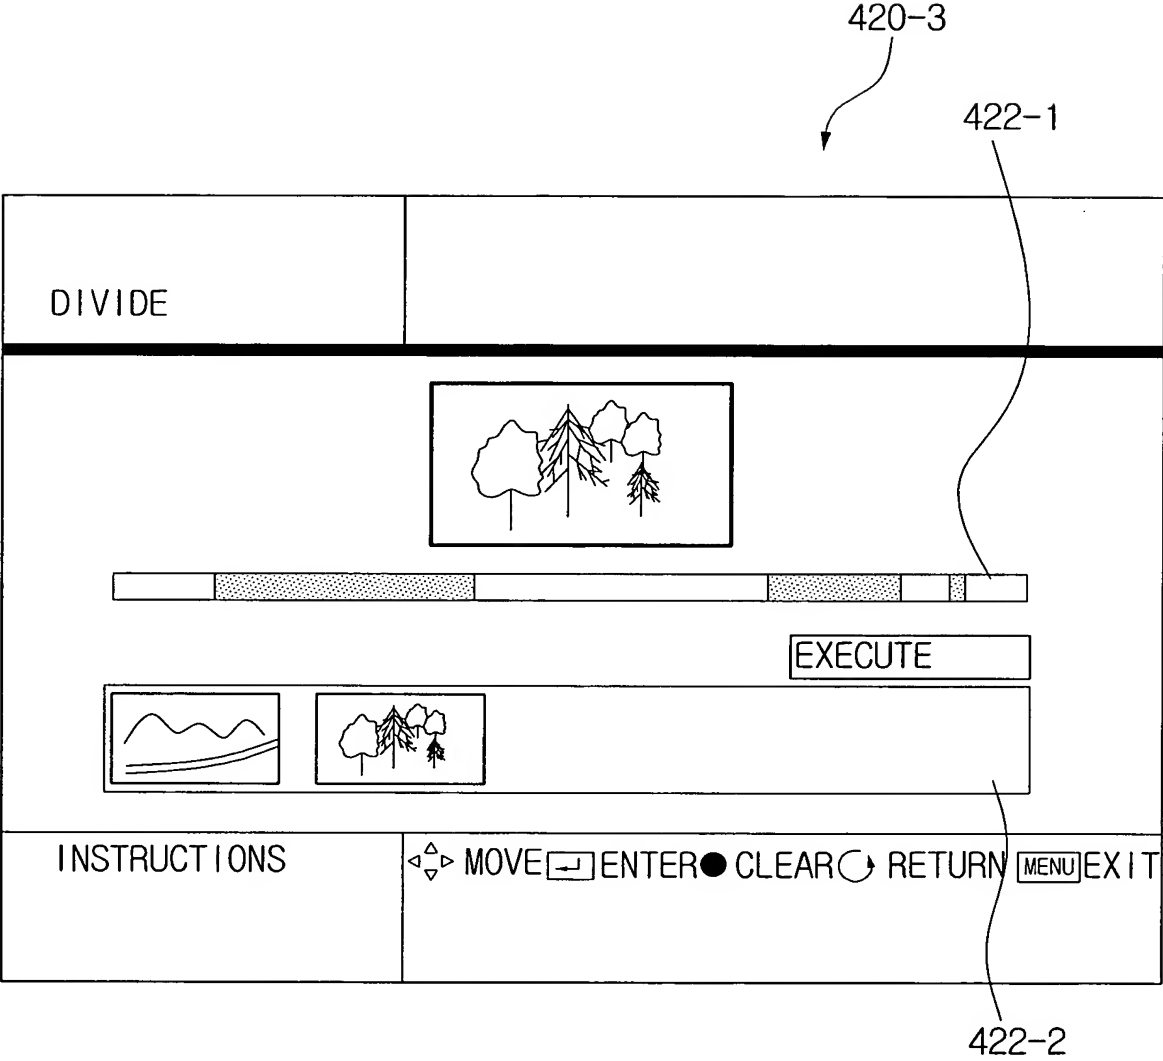 


FIG. 17

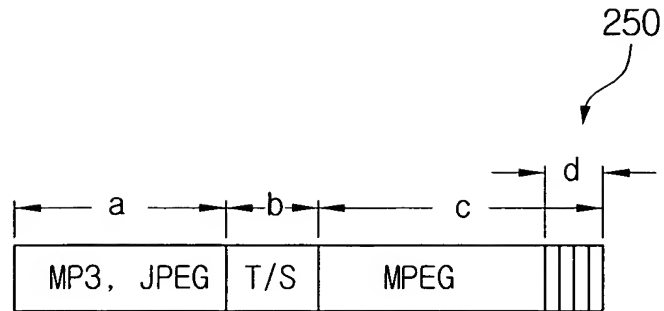 


FIG. 18

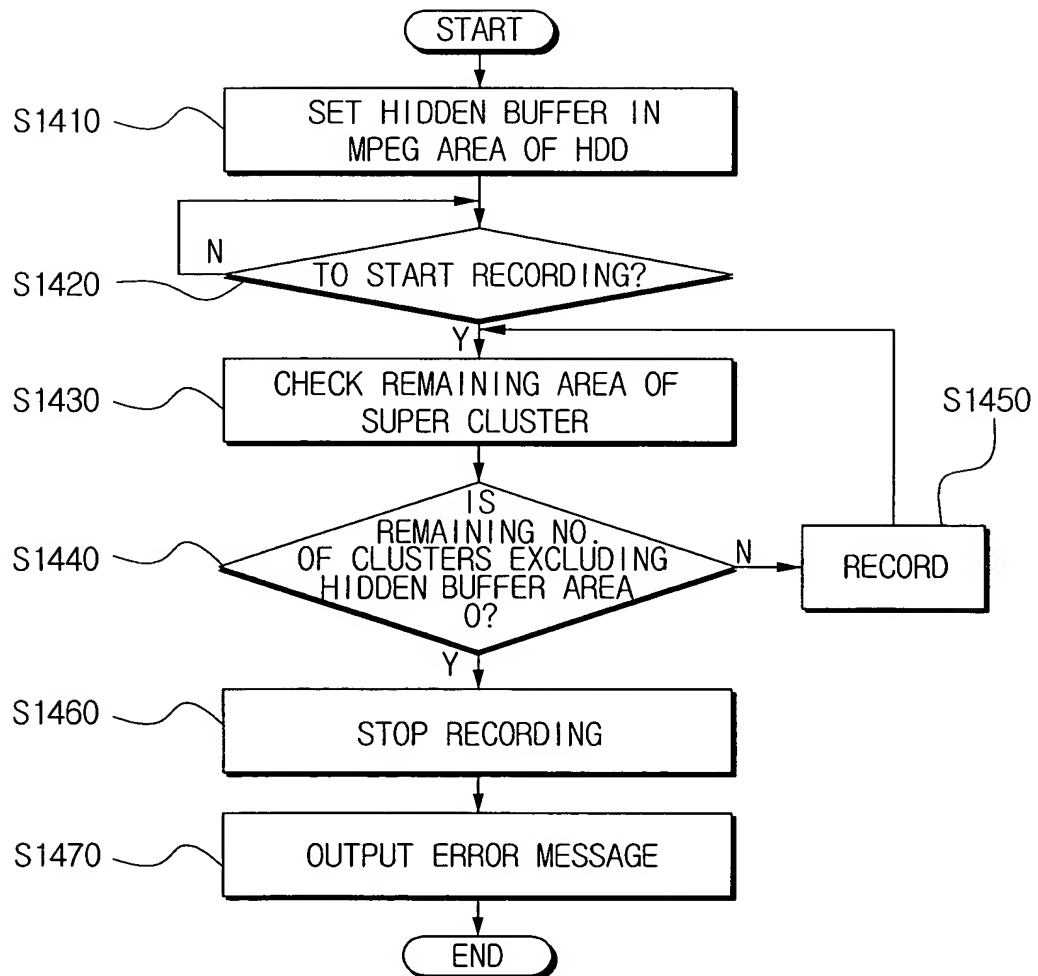 


FIG. 19

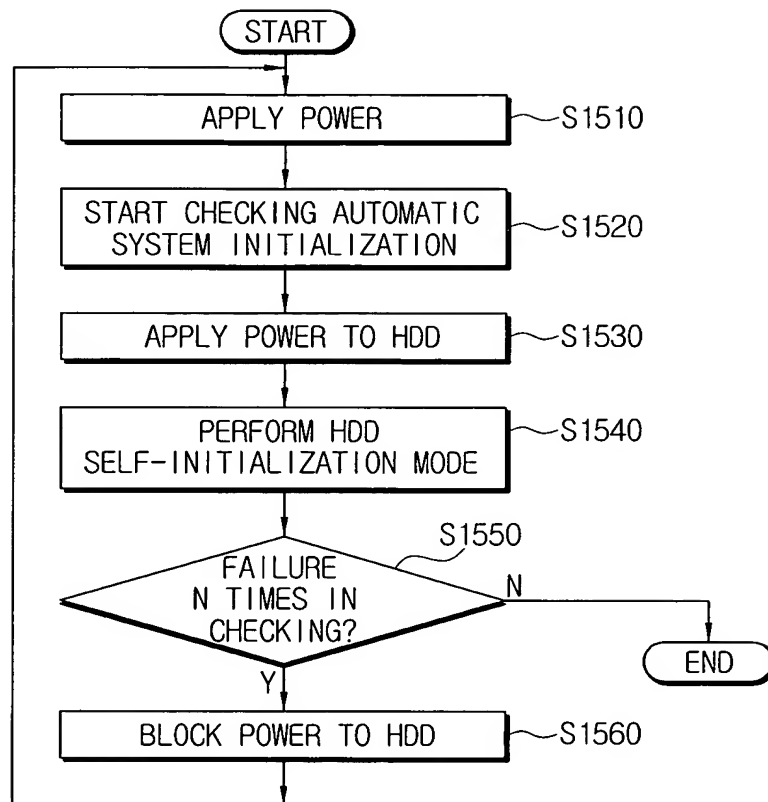 


FIG. 20

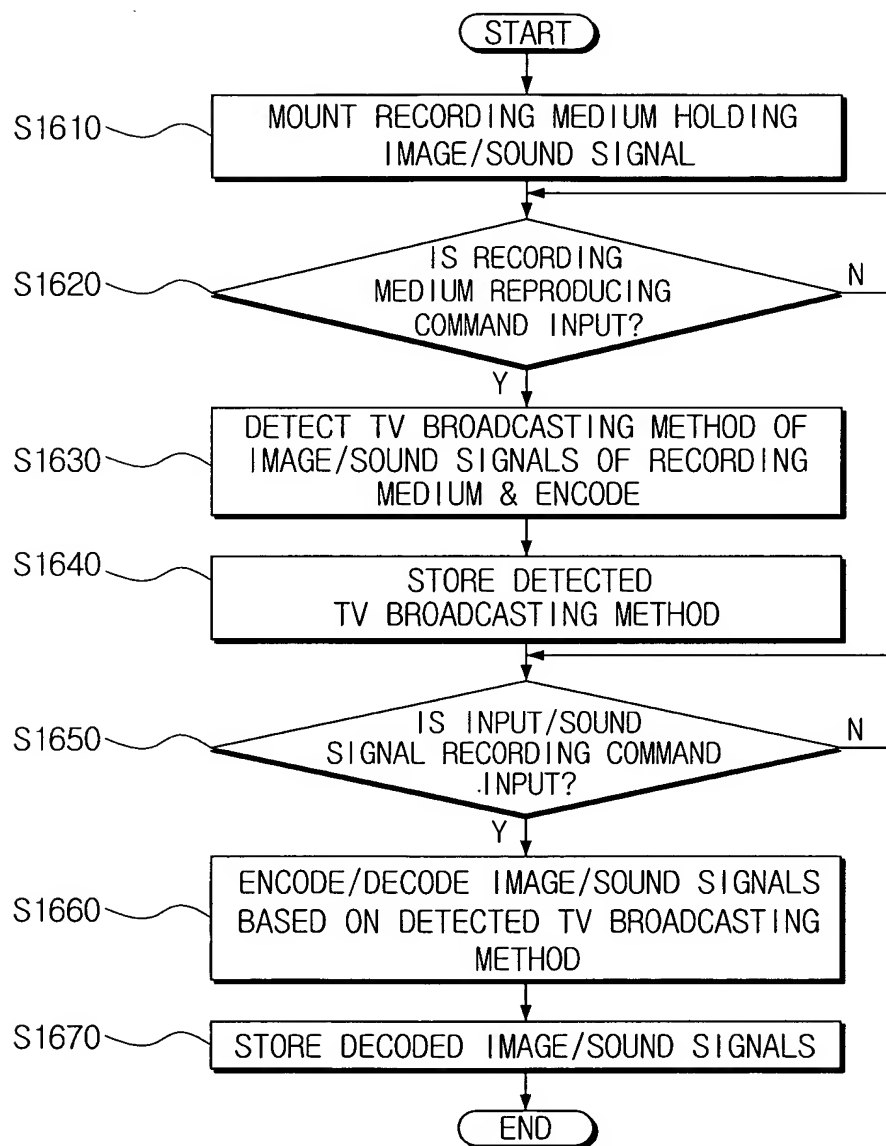 


FIG. 21

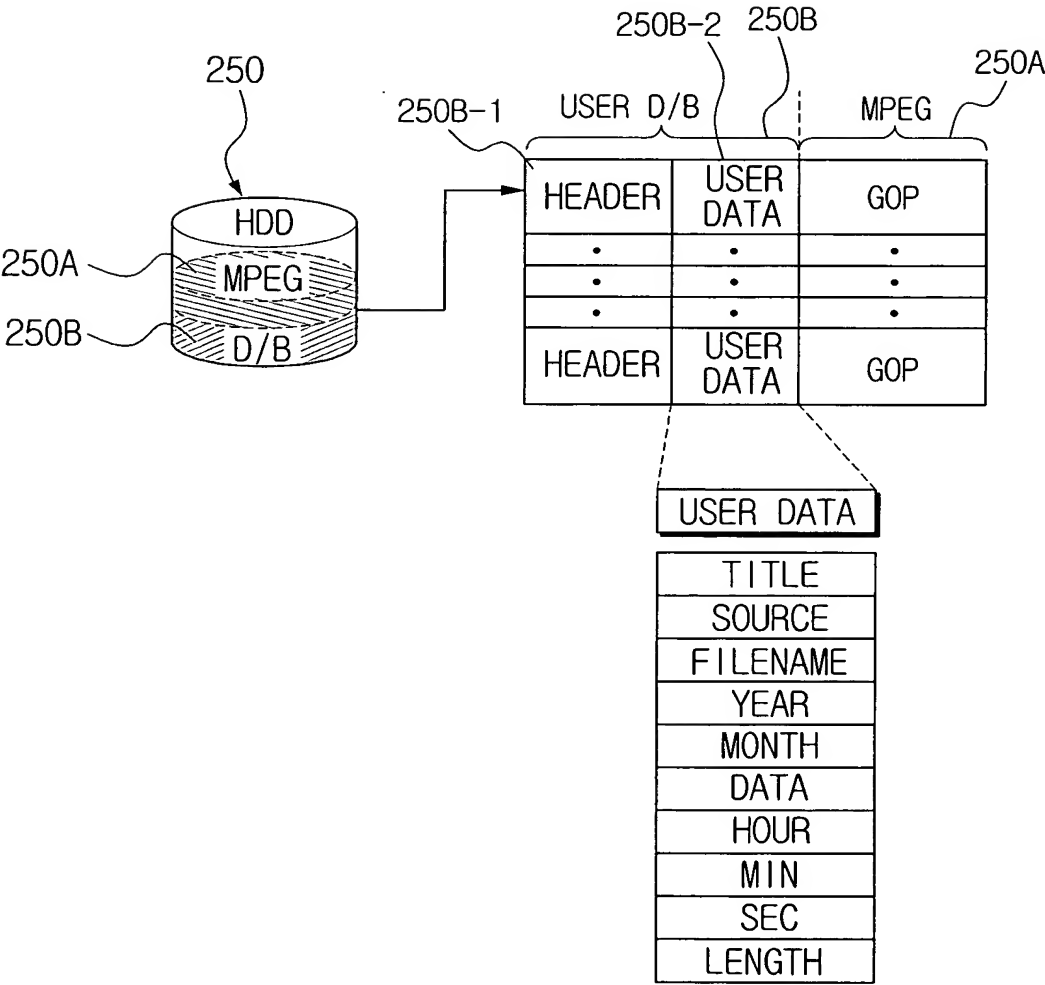 


FIG. 22

430




 


 

PROGRAM LIST		431-2			TOTAL
431-1		TITLE	DATE	LENGTH	
1		ART	24.12.01 11:12	30MIN	
2		BEAR	15.01.02 10:17	55SEC	
3		SCENE	17.03.02 14:15	43MIN	
4		ADVENTURE	12.07.02 09:20	12MIN	
INSTRUCTIONS		 MOVE  RETURN  ENTER  EXIT			

FIG. 23

